



First construct the tubing as per the instructions included in the Tube box.

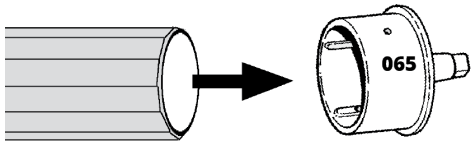

Insert the 4" Hub into each end of the Tube.


With 2 7/8" TEK screws, attach the Hub to Tube using a drill. Apply pressure to ensure the screw cuts into the Aluminum Tube and then cuts it's own thread.

Repeat with other side.

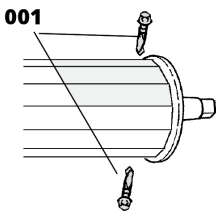


1 Assembling The End Units

Bolt the Wheels to the Frames and to the 3rd Leg Frame, as shown in the diagram. Next, bolt the 3rd Leg Assemblies to the Frames. Assemble one end unit to the Tube, using the Large Handle, as shown in the diagram. Assemble the other end unit to the Tube, using the Knob. For smoother operation, apply waterproof grease between the Hub and the Black Bushing. This should be done once a year. Position the assembled roller unit at the widest end of the pool.

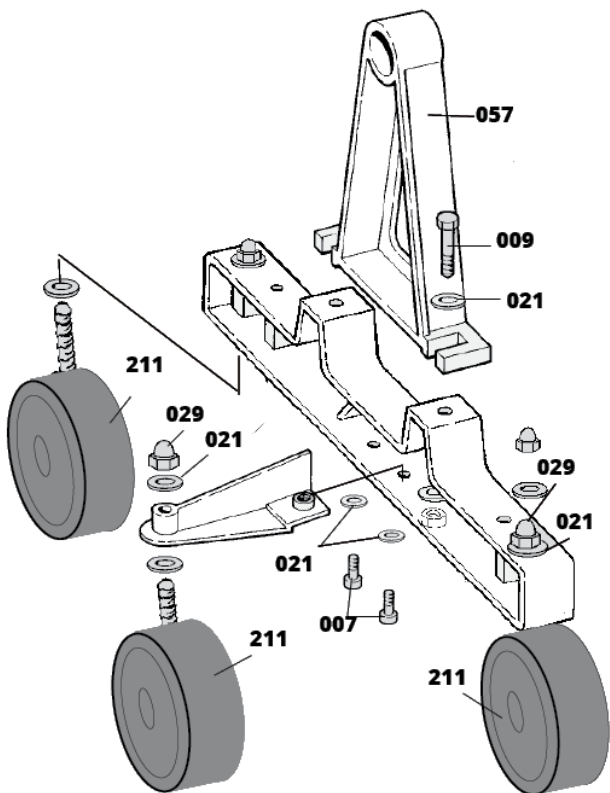

2 Assembling the System

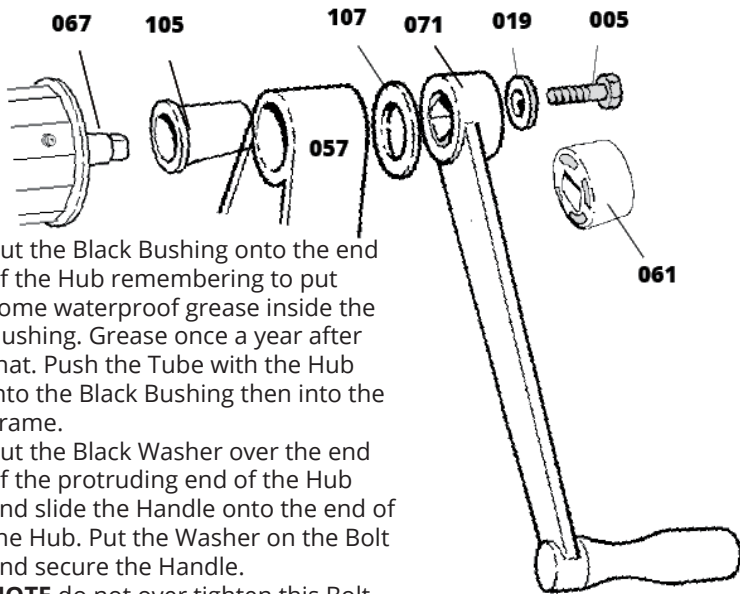

Put the Black Bushing onto the end of the Hub remembering to put some waterproof grease inside the Bushing. Grease once a year after that. Push the Tube with the Hub into the Black Bushing then into the Frame.

Put the Black Washer over the end of the protruding end of the Hub and slide the Handle onto the end of the Hub. Put the Washer on the Bolt and secure the Handle.



NOTE do not over tighten this Bolt as it will make it hard to rotate the Handle. Repeat this on the other end of the unit and use the Knob in place of the Handle.

Your system is now complete.


3 Positioning your Reel System

For **regular** shaped pools, align the outside edge of the Tube parallel with the end of the pool.

For **irregular** shaped pools, the outside edge of the Tube should be a **minimum** of 3' inside from the end of the pool. Place the reel at the widest point if that is possible for a better result.

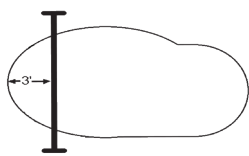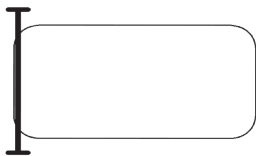

4

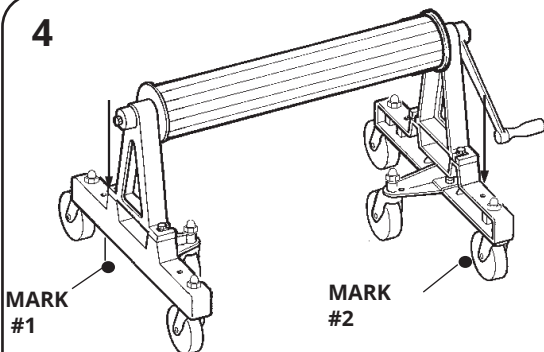

Using one of the two holes in the Frame as a guide, make mark #1 on the deck. With a 1/2" concrete drill bit, drill a 1 1/2" deep hole at mark #1. Complete steps 5 and 6 before continuing with step 4.

On the other side of the roller unit, make mark #2 by using one of the two holes in the Frame as a guide. With a 1/2" concrete drill bit, drill a 1 1/2" deep hole at mark #2.


NOTE:

Set one Bolt at front of the Frame at one end and one at the rear of the Frame at the other end.

5


Drive the Concrete Anchor into the hole with a hammer. Leave the Anchor raised 1/16".

To set the Concrete Anchor, hit the slug with a hammer and center punch driving the slug down into the Anchor forcing legs out into concrete.

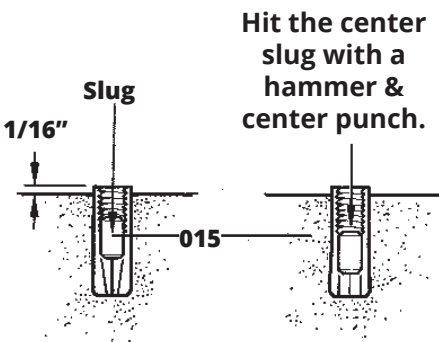


6

Insert the Anchor Bolt through the Spring and then through the Spring Guard, and through the hole in the Frame.

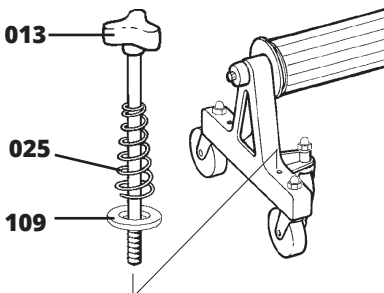


FOR REGULAR SHAPED IN GROUND POOLS

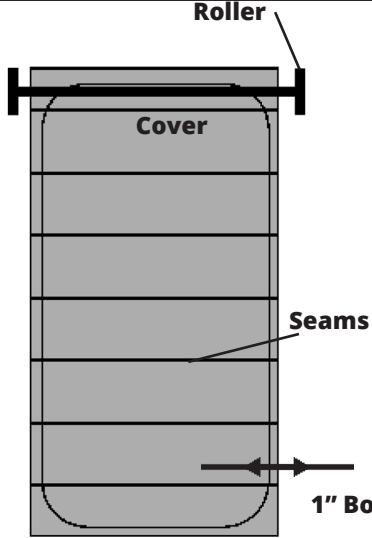

Open the cover over the pool and set it into position. Ensure that the end of the cover (where it attaches to the roller) is square to the roller.

When cutting the cover, allow a 1" wide border around the pool edge to compensate for shrinkage.

If the cover has seams, then the seams should be parallel to the roller. (This may not be possible with some types of covers.)

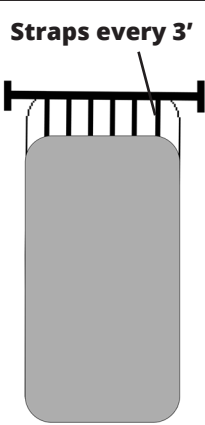


Attach the cut cover to the roller with the straps (See Grommet detail). Ensure the length of the strap allows the cover to lay flat on pool, to prevent wind from getting under the cover.


To measure your straps go from the top of the assembled reel system down to the water in your pool and then add two inches extra to compensate for evaporation.


FOR IRREGULAR, KIDNEY, OR ROUND SHAPED IN GROUND POOLS

Open the cover over the pool and set it into position. Ensure that the seams on the cover are parallel to the roller. (This may not be possible with some types of covers).

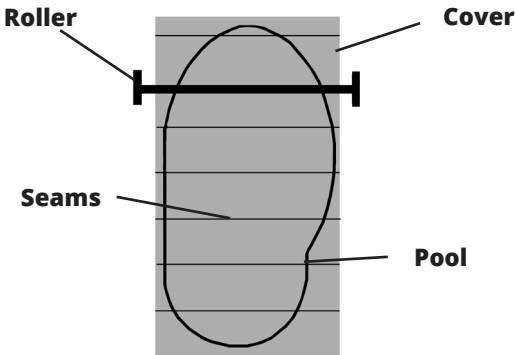


When cutting the cover, allow a 1" wide border around the pool edge to compensate for shrinkage.

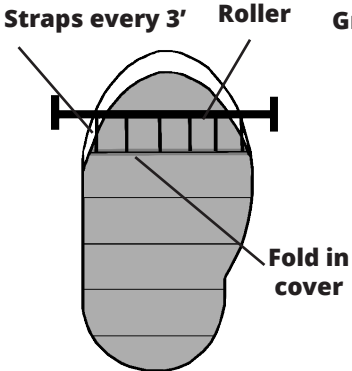

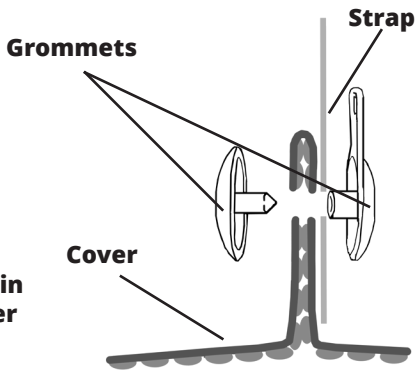


For odd shaped pools, pinch the cover and attach the strap as shown. Attach the cut cover to the roller with the straps (see Grommet detail) by folding the cover in a straight line as shown in the diagrams. Ensure that the fold in the cover is straight.

GROMMET DETAIL

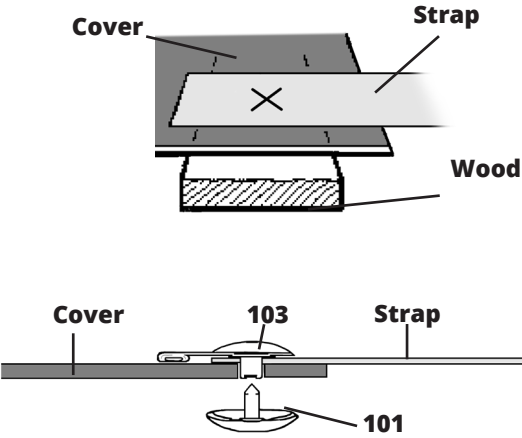


Position the strap on the cover. Cross cut through the strapping and the cover. Ensure that the hole in the strapping is at least 1" from the end of the strap and that the hole in the cover is at least 2" from the end of the cover. If possible fold the edge of the cover over so that you put the Grommet through two layers of cover.

This will ensure that the Grommet fits securely onto both the cover and the strap, and will help to prevent tearing.

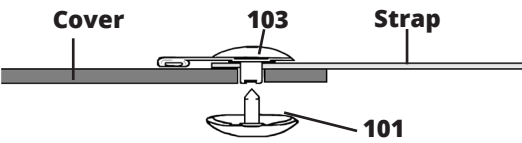

Insert the Female Grommet through your cut in the strapping and the cover. Ensure that the material is completely pushed down on the shaft. Insert the Male Grommet into Female Grommet. Once in place, hit with a hammer until secure. (**Caution - excessive force will break grommet**).

003

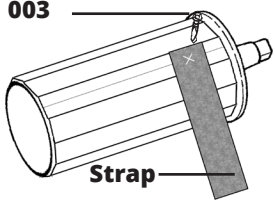

Using 5/8" Tek Screws, secure the strap to the tube. Make sure you put the screw about an inch into the strap to prevent tearing.

Tools Required:

Reversible Electric Drill
1/2" Concrete (masonry) Drill Bit
Hammer & Center Punch or Nail
5/16" Hex Head Socket Bit
1/2" Wrench
5/8" Wrench

This box contains

ITEM #	QTY	DESCRIPTION	RE-ORDER #
001	4	7/8" TEK Screws	501
003	12	5/8" TEK Screws	501
005	2	5/16"x1" Bolt	505
007	4	3/8" x 1" Bolt	507
009	4	3/8" x 1.5" Bolt	509
013	2	3/8"x8" Anchor Bolt	513
015	2	Concrete Anchor	515
019	2	5/16" Washer	505
021	20	3/8" Washer	503
025	2	Spring	517
029	6	Acorn Nut	523
031	4	3/8" Nut	525
057	2	#4 A-Frame	531
059	2	SR Base Frame	529
061	1	Knob	533
063	2	3rd Leg Frame	535
067	2	4" Hub	539
073	1	Large Handle	547
101	12	Male Grommet	549
103	12	Female Grommet	549
105	2	Black Plastic Bushing	555
107	2	Black Plastic Washer	555
109	2	Black Spring Guard	109
203	1	36' Strapping	589
211	4	4" Wheels	585

Rocky's Reel Systems Inc.

Tel: 1-800-663-8705 E-Mail: info@rockys.ca

For further instructions and how to videos visit www.rockys.ca